

### Replacing the Dual Trap<sup>TM</sup> retainer/collar and blades:

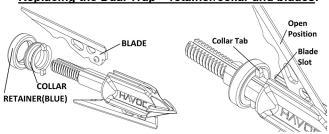

- Remove the Havoc<sup>™</sup> from the arrow (See "Assembling the Havoc<sup>™</sup> onto the arrow")
- Slide out the Dual Trap<sup>™</sup> retainer, collar, and blades. Replace worn out components as needed. (Note: The Dual Trap<sup>™</sup> collar will wear out less quickly than the retainer)
- Ensure the ferrule blade slots are clean and free of debris.
- Slide the blades to the front of the ferrule blade slots, and pulling them to the "open" position.
- Slide the Dual Trap<sup>™</sup> collar, with the retainer installed, onto the back of the Havoc<sup>™</sup> ferrule, with the collar tabs facing forward.
- · Align the collar tabs with the ferrule blade slots.
- Tighten an arrow to the back of the head (see "Assembling the Havoc™ onto the arrow").
- Re-engage the blades to the closed position.

#### Properly assembled practice blades:

 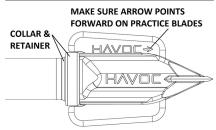


#### **WARNING!!**

Blades are very sharp. Use extreme care in handling. A special broadhead wrench is also provided to protect the archer from the sharp blades during assembly.

# Assembling the Havoc<sup>TM</sup> onto the arrow:

Carefully remove the Havoc<sup>™</sup> from the package. Place the Havoc<sup>™</sup> in the broadhead wrench. Unscrew the clear plastic collar from the Havoc<sup>™</sup>. Screw the Havoc<sup>™</sup> onto the arrow.



## Re-engage Blades Into Closed Position:

Using the back end of a marker, or other similar blunt object, apply pressure to the rear end of the blade using a forward and downward motion. **DO NOT USE YOUR FINGERS!** Havoc<sup>™</sup> blades are extremely sharp!

